



HOOK-UP

1. Make sure all air lines are secure.
2. Attach load to be lifted to safety lifting hook.
3. Air supply must be lubricated, filtered, regulated (80-100 PSI)
4. Connect air supply to the air inlet.
5. Use flow control to adjust "up speed".
6. Use adjustable muffler to adjust "down speed".

10' HOSE ASSEMBLY 909-04000 15' HOSE ASSEMBLY 909-04015