TRI-MOTION INDUSTRIES, INC.
LEADERS IN AIR BALANCING HOISTS

SENSI-TOUCH CONTROL HOOK-UP

BAL-TROL® BALANCE CONTROL

11/03

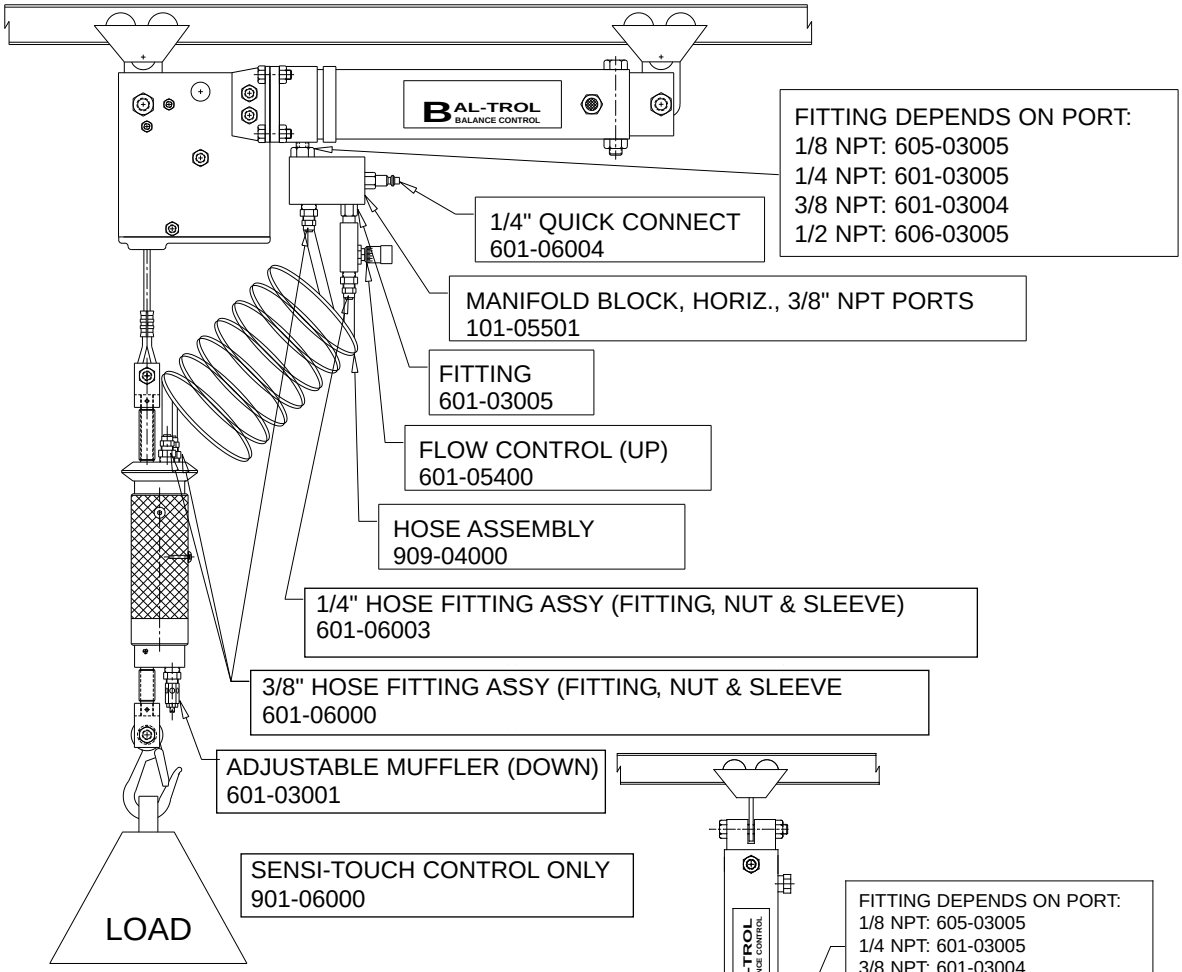

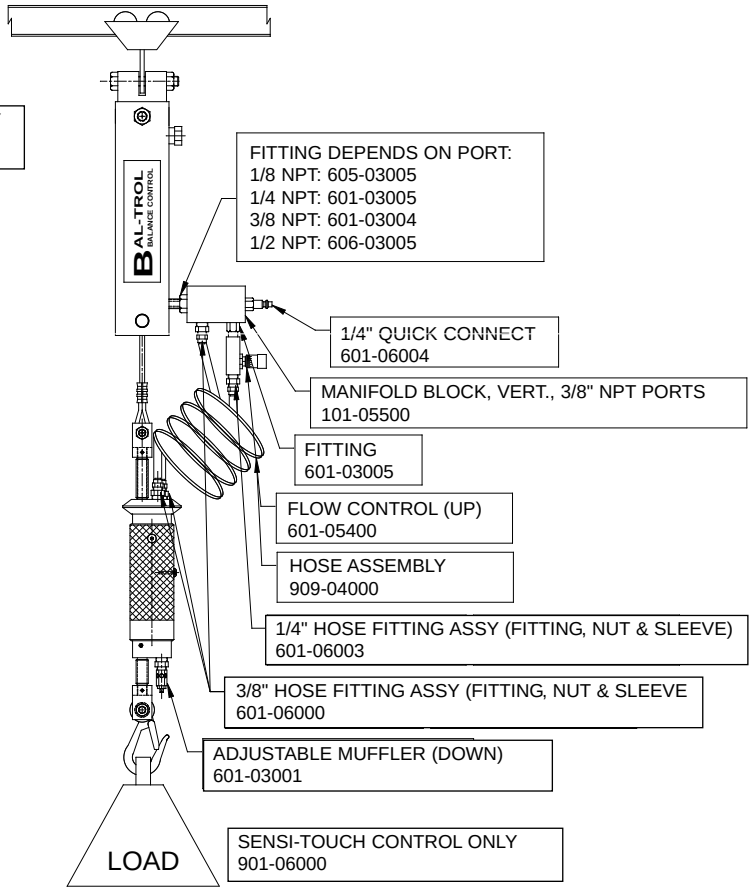

HOOK-UP

1. Make sure all air lines are secure.
2. Attach load to be lifted to safety lifting hook.
3. Air supply must be lubricated, filtered, regulated (80-100 PSI)
4. Connect air supply to the air inlet.
5. Use flow control to adjust “up speed”.
6. Use adjustable muffler to adjust “down speed”.

TRI-MOTION INDUSTRIES, INC. • 5688 W. CRENSHAW • TAMPA, FL 33634-3013 • (813) 884-6600 • FAX (813) 884-6800